

DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE

Please contact ShelterLogic® for questions, comments, parts & accessories, or assistance with any warranty related issues. www.ShelterLogic.com/support
Toll free : (888) 288-2345

Limited 30 Day Warranty

Subject to the following limitations, in addition to any imposed by virtue of applicable law, ShelterLogic® warrants this QUIK SHADE® Canopy to be free of defects in material or workmanship for a period of 30 days from the date of original purchase. This warranty is limited to the replacement of defective parts only.

1. This Limited Warranty will apply only if the QUIK SHADE® and/or its parts are properly returned to the ShelterLogic® customer service department listed below and are determined by ShelterLogic® in its sole discretion, to be defective. In some cases, pictures of the unit may be requested in place of the unit itself.
2. This Limited Warranty applies only to QUIK SHADE® Multi-Purpose Canopies purchased from authorized dealers. This Limited Warranty is extended only to the original purchaser and is not transferable.
3. Be sure to retain your original purchase sales receipt for any warranty claim. All warranty claims must be accompanied by a copy of the original purchase receipt from the authorized dealer.
4. Before returning any QUIK SHADE® Canopy and/or parts to ShelterLogic® for warranty inspection, the consumer purchaser must obtain prior authorization from ShelterLogic®. Such authorization can be obtained by calling our customer service representatives at the toll-free numbers listed below, or writing to the ShelterLogic® customer service department at the address listed below. Customer is responsible for shipping costs.
5. Certain regions of the country have environmental conditions that are extremely hard on canopy covers of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, or in high altitudes [above 3000 feet], the warranty period for your canopy top will be limited to 15 days from the date of original purchase. [After expiration of that 15 day period and up to a period of one year following date of original purchase, you may purchase a replacement canopy top at a reduced price from our customer service department.]
6. This Limited Warranty does not cover damage or loss from: wind, rain, fire, snow, ice, or other forces of nature; accident; normal wear; improper assembly, disassembly, or adjustment during set-up or take-down; or any abuse, neglect or misuse of this QUIK SHADE® Canopy and/or its parts.
7. To the extent allowed by applicable law, any implied warranty of merchantability or fitness applicable to this QUIK SHADE® Canopy is limited to the duration of this Limited Warranty. ShelterLogic® does not warrant against, and in no event shall ShelterLogic® or its authorized agents be liable for any personal loss, injury, or direct or indirect incidental or consequential damage resulting from the use of this product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

8. Upon receipt of authorization from our customer service department, you must submit your warranty claim to the address below, shipped prepaid and accompanied by a copy of the original dated purchase receipt. Do not return this product to the place of purchase. For warranty service, or for missing parts, replacement parts or any other problems, call or write to our customer service department below. We will send any replacement parts.
9. Any alterations made to the canopy by the customer will void the warranty.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

WARNING: Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

Please read completely before setting up your QUIK SHADE® Instant Canopy

1. It is your responsibility to read below and save these instructions before attempting to set up or take down your instant canopy.
2. The canopy is designed to provide shade protection only and caution must be used in any adverse weather conditions, including wind and rain.
3. Do not use or continue to use in any rain, wind, or storm conditions — especially lightning storms. Damage to the canopy can occur and put you and others in potential danger.
4. Always take your time when opening or closing the frame to avoid pinching your fingers or hands or damaging the frame.
5. Do not set up the canopy on steep inclines or uneven surfaces.
6. Do not use your canopy for permanent shelter or leave unattended, it is intended for temporary use only.
7. Keep canopy away from heat and flame at all times. Do not BBQ or build fires under or near the canopy.
8. The fabric top may be hand washed using mild soap and water. Do not use harsh detergents, abrasives or bleach and do not machine wash.
9. Never fold or store the canopy when it is wet or damp, allow to dry completely to avoid mildew.



Owner's Manual / Kids Convertible Canopy




Please review the following instructions and make yourself familiar with the parts and function of your ShadeTech® canopy.

Parts included:

[1]) assembled canopy frame and fabric top

[1]) storage bag

Set-Up --Step 1: Remove the canopy from the storage bag and place the canopy in the center of the setup area. With the feet of the canopy on the ground hold two of the legs and lift slightly for ground clearance. Extend the frame to a full arm's length, approximately four feet. (Fig. A)

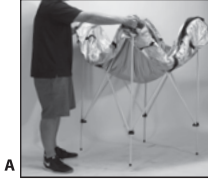

Step 2: At each corner, place one hand on the top corner. While pushing down on the corner, lift the slider with your other hand until it locks into position. (Fig. B)




Step 3: Repeat Step 2 on all three other corners.

Step 4: One side at a time, slide each side of the canopy top to the side of the canopy. (Fig. C)



Step 5: : Starting with any bottom corner place the leg of the canopy frame into the small pocket at the end of the canopy flap. Then repeat on all eight corners of the canopy flaps. (Fig. D)

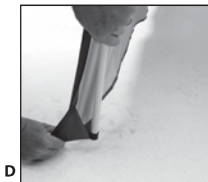


Step 6: : Enjoy the use of your ShadeTech II by QuikShade Convertible Shade Canopy Tent.

Step 7: Please note that you can also roll up any of the four sides of the tent by removing the two bottom sides of the canopy flap from the the frame (Fig.D) and then roll up the fabric on itself. When completely rolled up the hook and loop material will hold up the flap. (Fig. E)




Step 8: Fill out the included product information card with a stapled copy of your receipt and store in a safe place. Product information can be found on a sticker located on the eave of the frame (Fig. F)

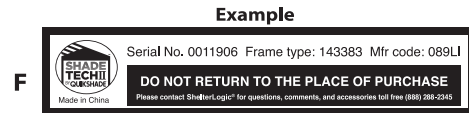

Go to shelterlogic.com/support/forms/product-registration/ and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line (888) 288-2345.

WARNING: PLEASE ALWAYS USE YOUR CONVERTIBLE CANOPY IN A WELL VENTILATED AREA AND KEEP AN EYE ON YOUR CHILDREN WHILE USING THIS PRODUCT.

Take Down --Step 1: Remove all canopy flap corners from the bottom of the frame's legs. (Fig. G)

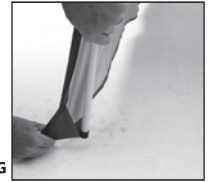

Step 2: Fold up the canopy flaps from the side of the canopy to the top. (Fig. H)



Step 3: : One corner at a time press the corner frame locks to unlatch the frame from the legs. Repeat on all three other sides (Fig. I)



Step 4: : With your arms extended on two of the top corners of the canopy lift the canopy and shake slightly as you pull your arms together to collapse the canopy (Fig. J)



Step 5: :The completely folded canopy should stand up on it's own. With the canopy standing, slide the bag over the top of the canopy. Turn the canopy over gently and pull the drawstring closed.